

# CAL BOX CALIBRATION

1. Remove back cover.
2. Measure each range and adjust the appropriate trimpot to yield the correct resistance within +/- 2%.
3. Close the unit and return to service.

